

## 83–676 Removal and installation of electronic switching unit for blower control

---

### Removal

---

- 1 Remove glove box (68–140).
- 2 Unscrew electronic switching unit for blower control (19) from holder and pull off electric coupling.
- 3 For installation proceed vice versa.
- 4 Check automatic climate control for function.

